




Follow these simple directions to put The Elator on.

- A Soft Flexible Loop
- B Sliding Latch
- C Flexible Support Tubes
- D Base Lock
- E Base Ring

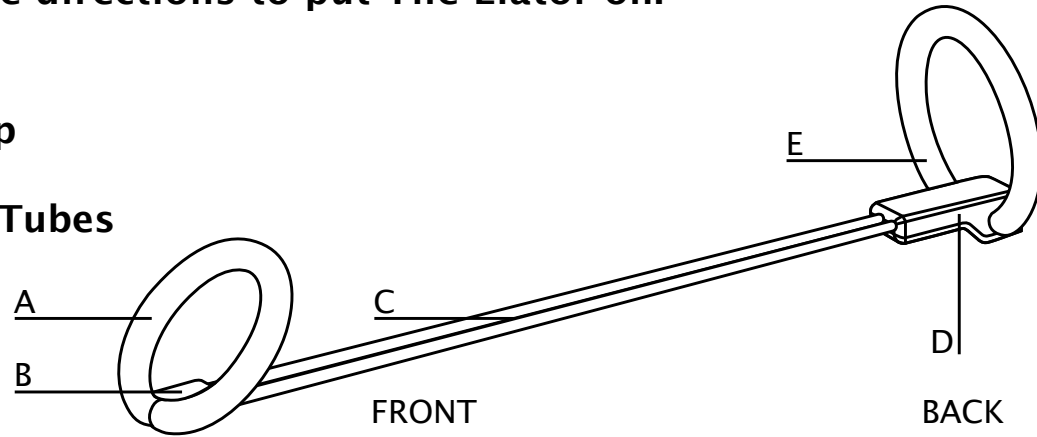


Be Careful!


The Elator is made to be flexible but bending it to far can cause damage.

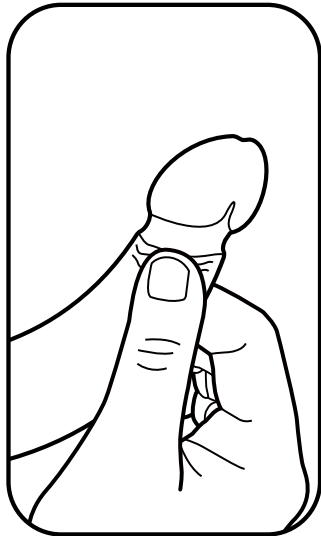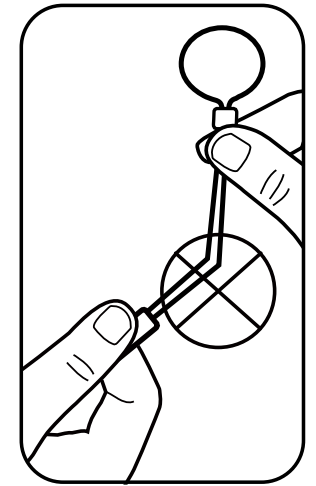


Fully retract the skin under the penis head to expose the penis shaft.

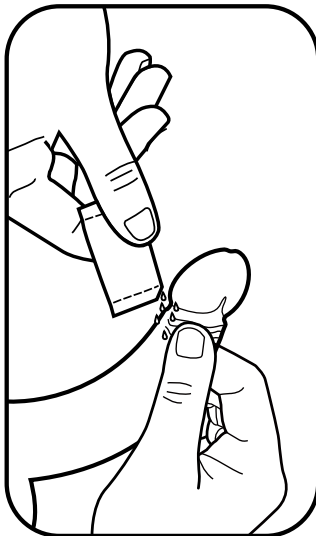


Apply a small amount of lubricant around the circumference of the exposed shaft.

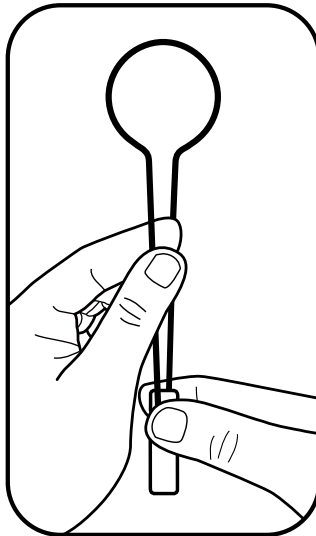


Move sliding latch down to the base of the Elator. Spread the flexible tubes to open the flexible loop.

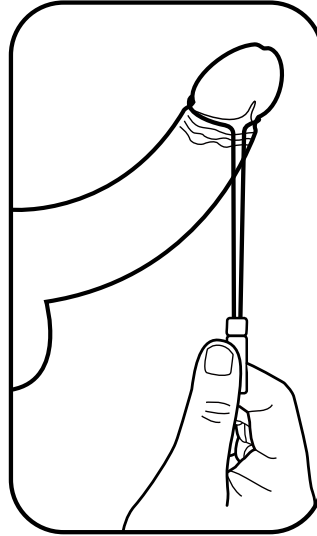


Insert the penis head under the flexible loop centering the tubes.

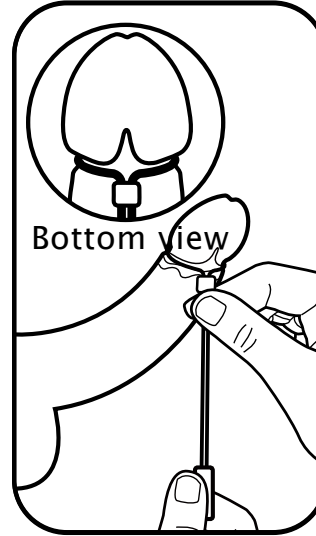

Move the sliding latch forward all the way, tightening the flexible loop.

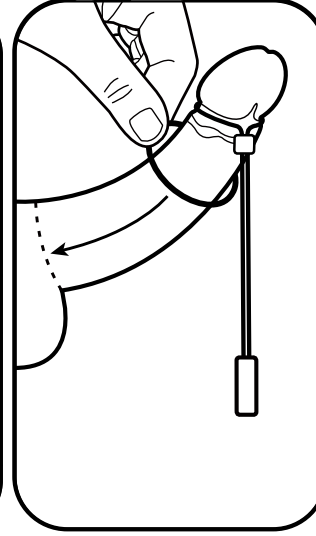

Place the locking ring over the penis shaft bringing the ring down to the base of the penis. The thinner portion of the ring should be towards the bottom.

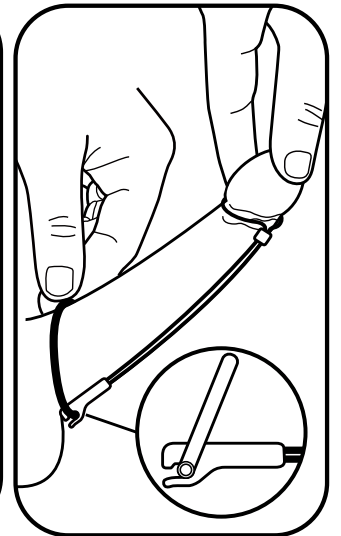

Stretch your penis and lock the locking ring at the base. If you have a lot of skin around the penis head make sure the skin is not pinched. At this point you should feel very comfortable.

the
Elator